

# HARD GROUND ANCHORS BOLT KIT


## Installation instructions

### REQUIRED (not included):

- DRILL with 20mm MASONRY BIT & 3mm WOOD BIT
- 19mm SOCKET & DRIVER
- SCREWDRIVER for cross-point or anti-vandal screws

### RECOMMENDED (not included):

- PROTECTIVE EYEWEAR
- PROTECTIVE GLOVES
- SAFETY HELMET
- UNDERGROUND CABLE / PIPE LOCATOR

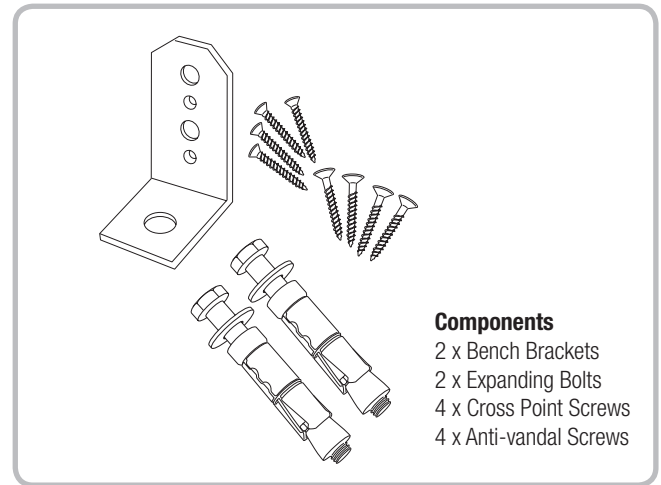

### Components

- 2 x Bench Brackets
- 2 x Expanding Bolts
- 4 x Cross Point Screws
- 4 x Anti-vandal Screws

**1**

Always check for buried services. Use an underground cable/pipe locator if you are unsure.

**2**

Fix 2 bench brackets to the inside of seat legs, diagonally (as shown below).

Mark hole positions through bench brackets, drill 2 pilot holes: 3mm dia x 45mm deep.

Fix brackets using either cross point or vandal resistant screws.

**3**

Position bench and mark the ground through both brackets. Move bench aside and where you have just marked the ground drill 20mm hole, approximately 110mm deep. Fit expanding bolt into hole to check depth and then remove bolt.

Reposition bench and fit bolt through the bracket, but don't fully tighten.

**4**

Repeat procedure for the other bolt. When bench is finally positioned, fully tighten both bolts.

**N.B. Make sure to seek professional help if in doubt.**